


Flushing Kit

Instructions

Exploded View

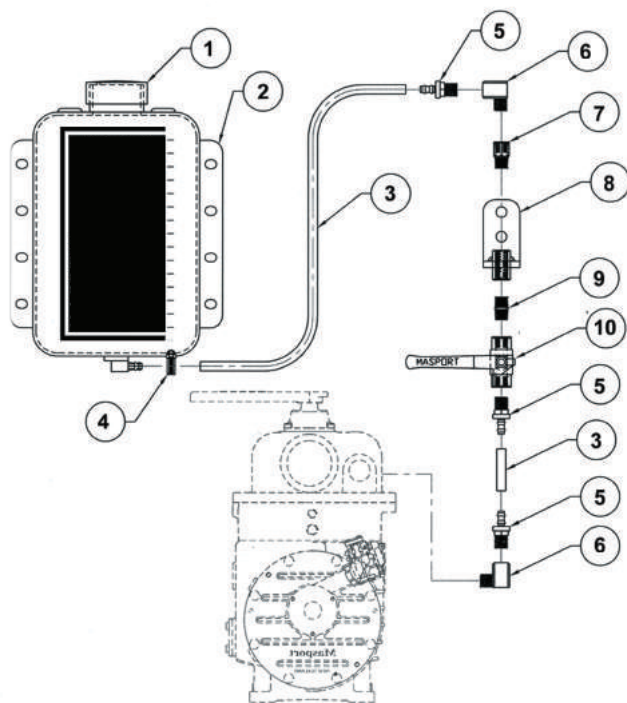

No.	Description	Code	Qty
1	Tank Cap	36002	1
2	Lubricator Tank	36001	1
3	Hose 1/4"	24299	2
4	Hose Clamp	24310	1
5	Pushlock 1/4"	27001	3
6	Elbow 1/4"	27002	2
7	Flow Restrictor	27032	1
8	Bracket	33461	1
9	Nipple 1/4"	30000	1
10	Ball Valve	25154	1

Flushing Procedure

Flush weekly, preferably at the end of the work week, or anytime carry-over contaminates the pump.

- ▶ Start vacuum pump and bring vacuum level to 15" Hg.
- ▶ Open ball valve to begin flushing fluid flow.
- ▶ Continue to run pump until fluid level drops one graduation (approximately 7 fl oz).
- ▶ Close ball valve
- ▶ Continue to operate pump one additional minute to ensure all fluid is purged from pump.
- ▶ Stop vacuum pump.
- ▶ Drain Oil Separator and dispose used fluid at approved recycling site.

Never reuse flushing fluid or pump damage may occur.

