


Remote Lubricator Instructions

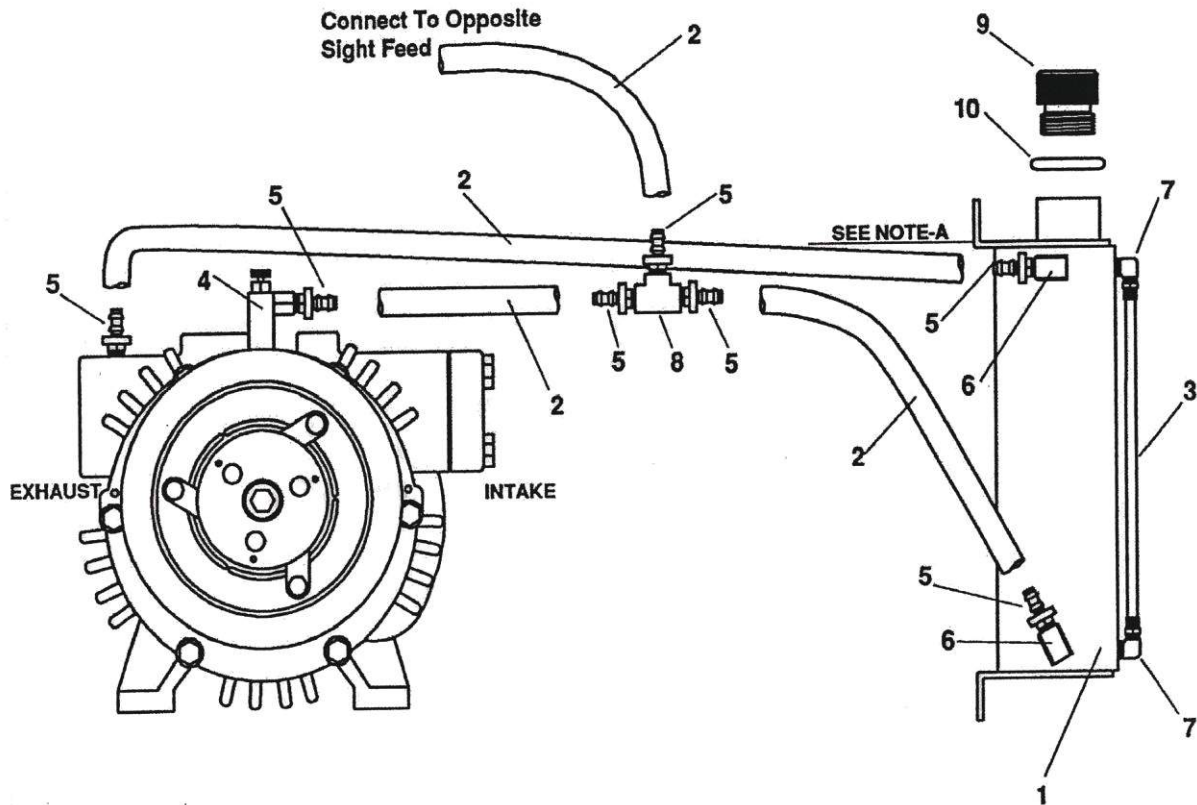

| No. | Description | Code | Qty |
|-----|----------------------|-------|-----|
| 1 | Oil Reservoir | 18058 | 1 |
| 2 | Push Lock Hose 1/4" | 24299 | 15 |
| 3 | Poly Tubing 1/4" ID | 24294 | 8 |
| 4 | Sight Feed | 25303 | 2 |
| 5 | Brass Push Lock 1/8" | 27003 | 8 |

| No. | Description | Code | Qty |
|-----|---------------------|-------|-----|
| 6 | Brass Elbow 1/8" | 27004 | 2 |
| 7 | 1/8" x 1/4" Adaptor | 27051 | 2 |
| 8 | Brass Tee 1/8" | 27022 | 1 |
| 9 | Oil Reservoir Cap | 27200 | 1 |
| 10 | O-Ring for Oil Cap | 36112 | 1 |

